User’s manual ： WY50QT-55

PREFACE

Thank you for buying WangYe’s Model WY50QT-55 motorcycle, meanwhile, welcome you to join the ranks that WangYe motorcycle drives sincerely. Unless it enjoy it is the safer for driving result happy, before driving should first contained every content in manual familiar completely. Your personal security, does not only depend on your alertness and is familiar with every operating technology, whether familiar with mechanical performance of the motorcycle relevantly with you too. Before driving each time, do a inspection first, maintain regularly at the same time, are all the most basic condition. If while needing to carry on time based maintenance or repair, remember to be only the special maintenances of our company of all parts, most clear how to deal with, can also guarantee to reach the best performance. If you possesses the technological knowledge of every machinery and maintains

tools, then the special agencies of all parts can offer the accessories catalogue and traditional accessories, help you to do a god job in multiple maintaining and repair work.

Operation instructions this adjust Model WY50QT-55 correct working technique with simple maintenance of motorcycle method, main point,etc. explain, expect durable to use in detail. Technical specification if there is the modification, manual this some picture or content might have some differences with the actual situation of vehicle, please forgive. Our company keeps the right of final interpretation.

May you drive happily, thank you for choosing a king wildly again Motorcycle.

The important points to attention:

The driver and passenger

This motorcycle was only used to one driver. Never exceed to the max load capacity of motorcycle.

For the safety, never drive the motorcycle in the atrocious weather or the cold weather(under -12℃).

For the road surface, only drive in the highroad

About the caution banner with the safety or environment, stick to the sundries box cover, the rear shelf, and fuel tank cover. (Look at clearly in the time for use or before use)

When the art change, the user manual will different some picture or content to the sample. Please excuse. Our company holds the power with the last definition.

Please carefully read the user manual

You must attention to the sentence or paragraph with the caution banner.

Attention:

If you never drive according to the user manual, you must make the important accident.

If you never drive according to the user manual, you must make be injured or the motorcycle can break

Please abidingly save to the user manual. If the motorcycle transfers to others, you must transfer the user manual to the new one

LIST

I. Motorcycle safe drive
Rules for safe drive……1
The payload……2
II. The parts &subassemblies and use instruction
Parts & subassemblies……3
Speedometer and indicator……5
Ignition switch……6
Fuel meter……7
Light switch……7
Starter switch……7
Dimmer switch……7
Turn signal light switch……7
Horn switch……8
Steering handle lock……8
Seat lock……8
Front box……8
III. Operation instruction
Check before drive……9
Engine starting……9
Driving operation……14
Brake operation……15
Engine power off operation……16
Stopping motorcycle……16
IV Service and maintenance
Periodical maintenance form……19
Obviation of the simple trouble……19
Cleaning of air cleaner……20
Maintenance of battery……21
Adjustment of idle speed……21
Gear oil change……24
Spark plug……24
Fuse replacement……25
V. Vehicle storage……25
Ⅵ. Main technique parameter……28
Ⅶ. Circuit……30
Ⅷ. Emission Control System Warranty Statement ……31

Ⅰ. Motorcycle safe drive

Rule for safe drive

Only diver can make sure the running safety of motorcycle

1. Many traffic accidents are caused by the inability of car driver to notice the motorcyclist, so the motorcyclist should try his best to be noticed by other driver

※Put on the coat in bright color

※Drive with great caution in the place with dazzling light or in blind spot.

2. Particular care should be exercised at the level crossing of roads, entrance and exit of parking lot or on the automobile lane.
4. Don't speeding, because the speeding usually to happen an accident.
5. You must get to the driving license and familiar with motorcycle. Never lend motorcycle to the man without driving license or unfamiliar with motorcycle.
6. Avoid to driving the road with accidental, easily result in the operation without used or the part was broken.
7. You must check up the motorcycle before driving. (Ref P10)
8. During drive, grasp the left hand bar by the left hand and the throttle twist grip by the right hand with feet on the footrests.

The payload

※Admonition:

Only put light goods in sundry box or other deposited place.

The goods weight conforms to the following blank 1:

Blank.1

Deposited	Weight(kg)
Rack	5kg
Luggage Box	1kg

※The motorcycle max payload is 75kg,including the weight with the driver and the goods.

※If the motorcycle is over loading, it can affect the stability and operation of the motorcycle.

※The goods on the motorcycle, must tie it.

II .The parts & subassemblies and use manual

Parts & Subassemblies(Fig.1,Fig.2)

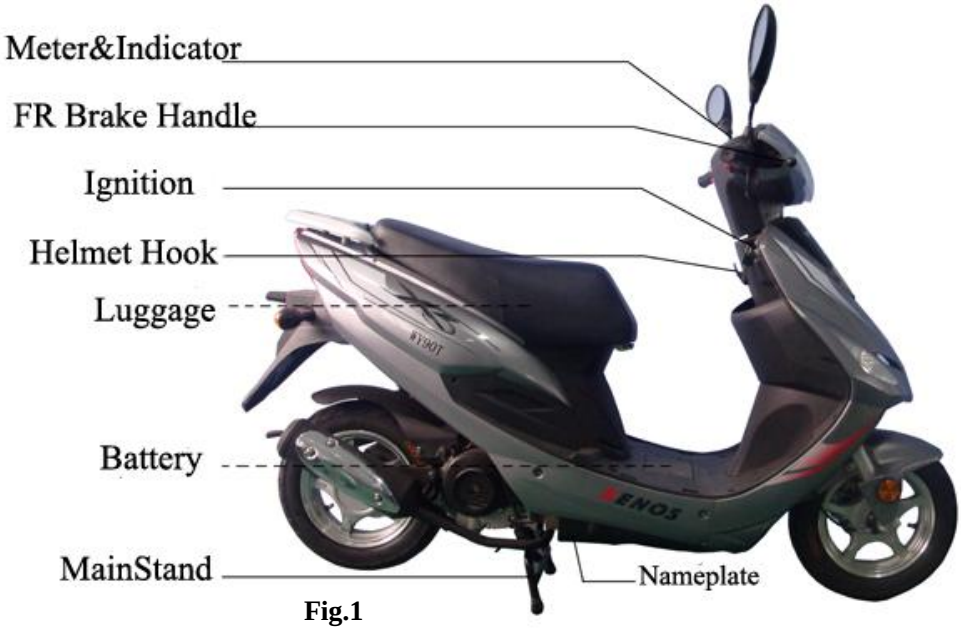

Fig.1

Fig.2

Broken Line（……）indicate the invisible parts.

Instrument and turn signal light (Fig3)

FIG.3

（1）Left turning signal light

⑵Odometer

⑶ Fuel meter

⑷ Speedometer

⑸ Right turning signal light

⑹ High-beam indicator

Ignition switch（Fig4）

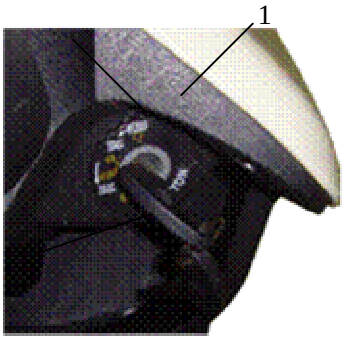

⑴On ( )-when the switch turn to this position,
Start engine and do not pull out the key.

⑵Off ( ) When the switch turn to this position,
Start engine power off and take out the key.

⑶Lock ( ) When the switch turn to lock position( ),
Take out the key .do not do any turning operation
And do not start engine and light.

Notice :If the engine is idling speed for a long time in the hot climate, It will appear too hot phenomenon Must close engine.

Fig. 4

FUELMETER (Fig 5)

Fuel meter (5) show the approx remainder of flue. When the hand point to (F), it indicates Full tank of 4L.
When the hand at red section it indicates the remainder of flue is 1.2L.

Fig.5

Headlight switch (1). （Fig.6）

There are 3 choices for Headlight Switch: “ ” 、“ ” and “•”

:Headlight, sidelights, taillight and meter light turn on。

: Sidelights, taillight and meter light lighting.

•: Headlight, sidelights, taillight and meter light turn off。

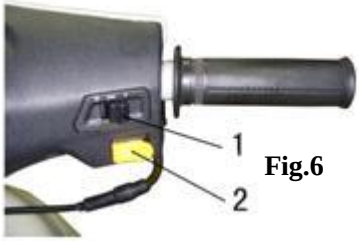

Fig.6

Start button（2）（Fig 6）

Press this button to start engine.（Ref:P14）

The front Hi-Low switch (1) (Fig 7):

Press ( ) button is high beam; press ( ) button is low beam.

Turn signal light switch (2)(Fig 7):

When the switches on ( ) turn left. When the switch on **( )** turn right, press this button to put out the signal light.。

Fig.7

Horn switch 3:（Fig 7）

Press (3) button, the horn makes sound.

Steering lock (Fig8, Fig 9):

Turn handle left to end, presses down ignition key1 to (), the steering device are locked Do the above opposite it opened.

Fig.8

Fig.9

Seat Lock（Fig 10）
Put the key into 2 and then anticlock-wise to open the seat.
Press down the multi-purpose until it make sound of locked, then push the back of multi-purpose to confirm it has been locked and take out the key.

•

III. Operation instruction

Check before riding:

Fig.11

Check before riding, for safety and prevent trouble or accident, pre-check up is necessary.
GASOLINE
When the pointer or fuel meter is close to red section, replenish oil.
，meanwhile，check if the fuel tank and Carburetor leak。

- Gasoline tank container: 4L
- Clock –wise to open the tank cover1. (Fig 11)
- Suggestion gasoline: octane number is 90
- Do not replenish oil together with tidy or water

NOTICE:
If check oil volume or replace oil soon after stop, Beware of burning.

Keep gasoline level under away from the height panel of flue tank while replenishing.

If gasoline level is too high, it is easy to leak out.

Ÿ If swallow the oil careless, see the doctor at once.

Inspection engine oil level（Fig 12、Fig 13）

1.Keep the motor steady in the plane screw up the oil dip rod and clean it, then reinsert and inspect oil.
2.If the oil level reach to down limit sign (2), replenish the standard oil to upper limit sign (3)

Fig.12

Suggestion the engine oil type:

SAE-15W/40

Fig.13

The free path of rear brake handle (Fig 14, Fig 15)

Measure the distance of rear brake pedal before detent function .the free path should between 10-20mm, take the tail of brake handle as standard.

Adjust nut (A): increase the distance of free path
(B): reduce the distance of free path

The axle pin2 should touch closely with nut (1) groove after adjust.

（10-20） mm

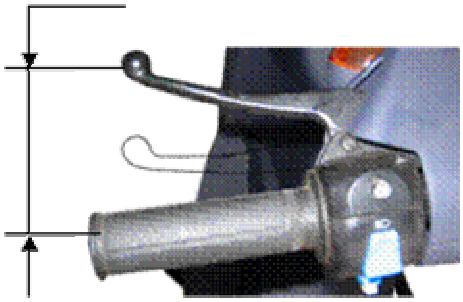

Fig.14

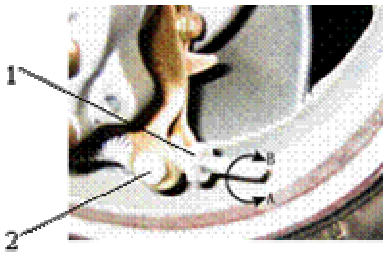

Fig.15

Brake Machinery's burst indicate mark (Fig 16)

(1). Reference marks.
(2). Indicate marks.

Notice :If totally brake. Change the brake block when reference marks and Indicate marks must be situated a straight line.

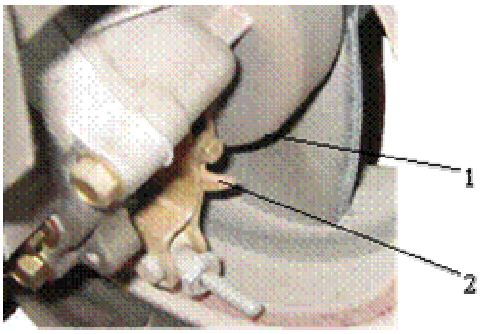

Fig.16

Tire

Check the tire pressure regularly and adjust.
Check before the tire cooled
Check if there any metal trash or gravel in the groove of tires

WARNING:

If the tire pressure dose not accord with the standard, it will properly cause the traffic accident.
It is dangerous that use the worn tire, It will have effect to friction between tire and rode. Maybe make difficult from drive or accident.

Start engine (Fig 18)

1

Fig.17

Put the key into ignition switch and turn to ON
Electric starter: press start button (1) to start engine, DO not use the starter more than 5 seconds each time.

NOTICE:

Electric starting is only in the condition of grasping the brake handle.
Electric starting not succeed, if starting again with it, we must stop for 30 seconds, If still can't start, Please use kick-start.
Engine kick-start :open ignition switch and add gasoline slowly, step kick-starter pedal down quickly with strength to start engine.
Notice: After using kick-starter pedal, pull it back to original position. Otherwise have effect to safety ride, and bad to engine.
Had better not open ignition switch when scooter has not use for a long time, and first step kick starter for some times. Make flue into carburetor and then into cylinder, and open ignition switch, Start engine, it is easy to start engine like this.
If cold start, warming up engine for 2-3 minutes.

Riding motor:

WARNING:

Wear the trousers to avoid touching with exhaust pipe and was burnt.

The entire device must be installed according to requirement of the traffic rule.

Take the license to riding.

NOTICE:

Control the speed and load during 1000km of running in period.

Load should be within 100kg(including driver)

If take more weight and speed will reduce life of engine,

Speed according to (Blank 2)

Blank2

Log (km):	**0～200**	**200～500**	**500～1000**
Speed (km/h):	**⩽30**	**⩽45**	**⩽55**

Riding operation

Release rear brake level, add gasoline slowly with throttle grip, then motorcycle will move forward smoothly.

NOTICE:

Do not add much gasoline suddenly with throttle grip to prevent motorcycle rush out. Maybe lose control.

Before drive, must take the stand.

Brake operation:

1.Control throttle grip

If want to reduce speed, Must control the throttle grip, at that time use the two-brake system, this point is very important.

Notice: if the drive will be done in this situation, for example: damp or loosely roads, raining .no matter brake, add speed or turn must take care.

2.operate front and rear brake.

Notice: Totally close the flue when driving in a descent, and use two-brake system to reduce speed. Don't use brake continuously, otherwise it will reduce the effect of brake because of high temperature .

Warning: Don't use single brake when driving at high speed, especially on crooked and slippery road. Please use the both brake systems for avoiding accidents.

Engine Powered off（Fig18, Fig19）

Close oil: revolve to the lowest place according to picture. (Normal situation is loose the throttle grip, and the engine is idling speed) Put the key to "（⊠）"

Fig18

Fig19

Stop operation:

When the motorcycle stops, turn the key to "⊠" position .put down the side stand and lock handle.（P7）

Alarm points:

1 Locking the handle and do not left key in the keyhole
2 Put the motor into the garage
3 Use the excellent guard against theft device

Ⅹ.Maintenance periodic form

The maintenance is important to motorcycle, If drive with high speed in bad situation for a long time, must add the times of maintenance, If motorcycle have a big repaired or a accident, Must take it to check for mainly spare parts. For example: frame, indicator parts and so on. Repair or change the worn parts. Make sure safety.

Notice: Don't change motorcycle make sure it's safety, Must use good quality spare parts if replace spare parts .if use bad quality spare parts, it will influence the safety of motorcycle.

Warning: Must close engine when make maintenance .it make sure the repairer's safety. And put down the stand on the smooth ground.

Notice: Must make a good maintenance if the motorcycle don't use over a month, or don't use in all the winter. Make flue, tire and battery avoiding corrode.

Maintenance periodic table (Blank 3):

Check before time based maintenance Ref P11)

I: Inspect

C: clean

R: Rechange

Blank3

Cycle		speedometer（x1000km）

				1	4	8	12	Ref page
		Every month			6	12	18	
*	Fuel pipe line			I	I	I	I	
*	Operation of throttle			I	I	I	I	16
*	Core of the air		Note1	C/1000km, if need: R				23
*	Spark plug			C/2000km,If need: R				27
*	Idle, carburetor			I	I	I	I	25
*	Belt, drive			Per1000km I If need: R				
*	Oil, gear box	Note3	（300km）R			I		26
	System,			I	I	I	I	11
	Switch,				I	I	I	
*	Head light				I	I	I	
*	Suspension				I	I	I	
*	The	Note2		I		I		
*	Wheel, tire				I	I	I	13
*	Turning			I			I	

*****If you have all of tool and maintenance document, you are a mechanic person, or else must let special person maintenance and repair.

**For safety, we claim all of items have done by mechanic person.

Note: 1, if this area is very damp or have a lot of dirty .you had better make a short time for maintenance, when it takes more oil quantity or not strength, it must change.

2, if it was used every day, must make maintenance.

3, change then according to season in a cold area.

Simple trouble solution (Blank 4) **Blank** 4

	Trouble reason		Solution
The engine can't start	Spark plug no spark	Spark plug wear	Change
		Ignition wire wear	Change
		CDI wear	Change
		Ignition switch wear	Change
		Ignition Come off or become	Connect well or firm and tight
	The spark is weak	Spark plug gap too small or big	Adjust
		Spark plug pole burn	Change
		The spark plug accumulates	Clear out
		No spark to consult the spark	
	No mixed air in cylinder	No fuel	Replenish
		Oil mouth stop up	Dredge
		Fuel tank pressed the switch to	Change
		The oil passage stops up	Dredge
		Air filter stop up	Clear
		Take in system leak	Check and clear out
	The cylinder compresses strength low	Spark plug seat leak	Screw up spark
		Cylinder cover leak	Change spacer
		The piston-ring and the cylinder	Change piston and cylinder
		The piston ring is broken or stored up the carbon to hinder very much	Change piston-ring or clear carbon

Blank 4

Trouble	Trouble reason	Solution
The vehicle is unable to accelerate performance badly	The octane value of the fuel is too low	Change flue
	Oil path stop up	Clean oil path
	Ignition time is too early or too late	Check wire and change CDI
	Spark too weak or flameout	Check ignition and clear out
	Mixed air too dense or race	Clean adjust carburetor
	Engine leak	Check and clear out
	Muffler stop up	Dredge
	Belt wear	Change
	The automatic clutch roller wearing	Change
	Consult engine can not start	
Electric starter does not work	Exceed clutch worn	Change
	Start the relay wear	Change
	Lack of Electric consumption	Charge
Riding unsteady	Turning axletree gap too wide	Adjust
	Lack of tire pressure	Pump
	Front rear shaft flexible	Screw up nut
Apply the brake and does not work	The brake shoe one is worn and torn to limit	Change
	Apply brake to enclose wear	Change
	The guy cable is worn to apply the brake	Change
	Journey is too long	Adjust

CLEAN THE AIR FLITER（Fig 20）

1 Take out rear protecting bar left protecting bar
2 Take apart air filter cover and screw up bolt.
3 Take out filter element
4 Compress air or use dry brush to clean filter element.
5 Do the above opposite to reinstall the air filter.

Fig20

NOTICE:

Do not use gasoline or low burning point solvent to clean paper filter element.

Fig 21

Maintenance battery (Fig 21)

Please add a little water into the battery when using it for the first time

Notice:

Never take apart upper cover of the electrolyte.

If the motorcycle don't use for a long time, put it in a dry and well-ventilated place aft
charge. Once the head of battery was corroded, take the battery off and
clean. (Use boiled water)
Notice: Turn off the ignition switch before taking apart the battery. Taking negative terminal first and positive terminal next, when installing, just opposite to above procedure.

Idling adjust (Fig 22, Fig 23)

Warm up few minutes after the engine starts
Idle to adjust screw (1) is it is it improve idle speed slightly to enter to fasten, is it is it withdraw it than screw slowly after stocking to fasten to mix and then rapidly, to stabilizing the position at most, then withdraw slowly, get and stabilize the position the most low.

Fig 22

After adjusting idle speed, then adjust accelerate graph handle to free path for 2-4mm
Then use adjustor (2) to adjust, screw down nuts, and then screw up it after adjust.
Adjusting the good idle speed, when should be able to suddenly strengthen the throttle, the rotational speed of the engine should be excessively steady, no flash back and can't go out, stop working or arrange organ not to blow out at being last throttle

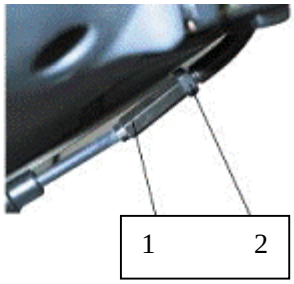

Fig 23

- **Oil change and cleaning of oil filter net**

- **Oil change（Fig24）**

Change the oil only when the engine is not cool and the vehicle is supporting by Jiffy stand, to pour out all the oil completely and quickly.
Screw out the the cover of oil hole /oil dip rod and the cover of oil filter screen ,then unbolt the oil filter(1),Net(2) and the spring (3)
Clean the oil filter net with the impregnant
Fill in the oil filter net,spring and the cover of oil filter screen
Immit oil meeting the specification to the engine, do not let the oil mass exceed the mark of upper limit of the
cover of oil hole / oil dip rod. When measuring the oil level, do not screw down the cover of oil hole / oil dip rod.
Fill in the cover of oil hole / oil dip rod
Let the engine work at the idle speed for several minutes and stop it .then start the engine.
Remeasure the oil mass. Make sure the oil mass is near to or in the mark of upper limit without leakage.

Fig 24

Changing of gear oil（Fig.25）

The recommended engine oil:

SAE 80W/90

Oil capacity
Resolving capacity:0. 11L

Changing capacity:0. 1L

- Park in Main Stand。
- Take apart the limiting bolt (2), and the spilling bolt (1).

Fig25

NOTICE: The engine must be warmed up when spilling and the vehicle must be support by main stand!

Reinstall the spilling bolt after clean. And screw up.
Inject 100ml to engine through immix bolt

- Install immit bolt and screw up.

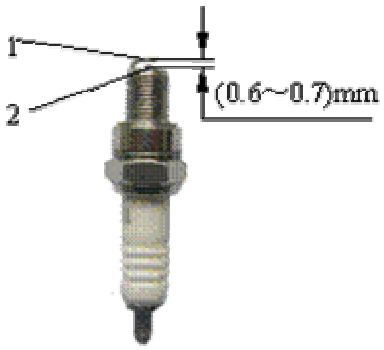

Fig26

Spark plug(Fig 26)

The specification of spark plug

Standard: C7HSA（NGK）,A7T,A7RT

Take apart the spark plug; Take it of with special tool.
Examine if there is dirty on poles and the porcelain head in center .If it has corroded, must change it .It is the best way to clean with the liquor of spark plug Use wire brush if no cleaner.
Normally the gap between side electrode (1) and Center electrode (2) is 0.6-0.7.

- Don't use other spare plug.

Fuse replacement

The specified electric current of the total fuse is 15 A
If the connection is not good, the fuse will overheat and breakdown.
Do not use any fuse whose specification is different from assigned. It is the same Main reason of wiring burning.
NOTICE: Do not use brass wires to replace the recommended.

V. **Vehicle Storage**

Storage

For the motorcycle not to be used for a long period of time, for example, in wintertime, some steps should be taken to prevent malfunction of and damage to its components, which might be caused by long storage. Besides, before the long storage, proper maintenance has to be carried out for fear that it might be forgotten when vehicle is put back into use after storage.

1. Change engine oil and oil filter.
2. Drain off fuel from the fuel tank and carburetor, spray atomized anti-rust oil onto the inside wall of the tank and then close the tank.

Warning:

Gasoline is inflammable and may cause fire and even explosion under certain conditions. Therefore, do not smoke, make fire or have any fire left behind on draining off fuel.

3. Take out the spark plug, pour about 15~20ml clean engine oil into the cylinder, step down the kick lever repetitively for several times so as to have machine oil distributed all over the engine and finally fit the spark back on.

Attention:

The ignition switch must be set to ”OFF” position before stepping down the kick lever.

To protect the ignition system from damage, the spark plug should be inserted in its cap and earthed.

4. Wash the motor, wipe it dry and apply an even coat of wax to the painted surface. Chromate treatment can prevent the surfaces from rusting.
5. Inflate the tires as required and pad the vehicle up by wooden blocks with the two wheels clearance of the ground.
6. Put the vehicle in a shady and cool place free from humidity and direct sunshine and cover it properly (but not with plastic or other painted materials).

Reuse motorcycle.

Clean the motorcycle, if the storage time beyond 4 months, Must change gasoline.

Must charging if need, and then install battery.

Must check all of terms before drive (Page 9), for the safety must try the motorcycle with lower speed for some time in a not busy rode.

Vehicle Identify

Position of the model No, reference No and scutcheon.(Fig27)

Provide the above No when register, get the license, yearly inspection, and also enjoy the after-service clause.

Ⅱ. The tool set

The tools bag in the boot of seat. It including the something of the following:

8*10 spanner	12*14 spanner
Screwdriver	hexagon spanner
Wrench bar	18.5*17 wrench spanner

Fig 28

VI. **Main technique parameter**

Blank.5

MODEL	DATA	MODEL	DATA
Exterior size mm	1755×670×1170	Front wheel	3.00-10
Wheelbase mm	1240	Rear wheel	3.00-10
Ground clearance mm	95	Air pressure of F wheel kPa	200
Dry weight kg	92	Air pressure of R wheel kPa	250
Max payload kg	150kg	Transmission Type	CVT
Genocidal of operation bar °	≤48	Speed Ratio of Transmission	10.83～33.85
Brake base m	≤4(20km/h)	Engine	139QMB,Single cylinder 4 stroke, Air-cooled
Maximum speed km/h	≤50km/h	Cylinder bore*stroke mm	39.0×41.3
Consumption L/100km	≤2.0L/100km	Working capacity ml	49.3
Climb ability °	≥12	Clutch	automatically centrifugal
Lean	-1.3%	Capacity of gasoline tank L	4.5
Starting system	Electric & kick	Battery	12V 7Ah

Blank 5

MODEL	DATA	MODEL	DATA
Lubricate system	Press & splash	Fuse	15 A
Normal power kW/r/min kW/r/min	2.2kW/7500（r/min）	Head light	12V 18W/18W×2
Maximum torque	3.0N.m/7500（r/min）	Rear/stop light	12V 5W/21W
Compression ratio	10.5：1	License Plate Light	12V 5W
Spark plug gap mm	C7HSA(NGK)/A7TC/A7RTC	Turning light	12V 10W×4
Gap of air valve mm	0.6～0.7	Fuel	RQ93 above
Idling speed r/min	(1500±150)r/min	Capacity of the oil with gear box L	0.11L
Capacity of the oil with crankcase L	0.8L	The oil with gear trademark	SAE 80W/90
Ignition System	CDI	Clearance of Value	0.03～0.05（Cold）

VII. CIRCUIT

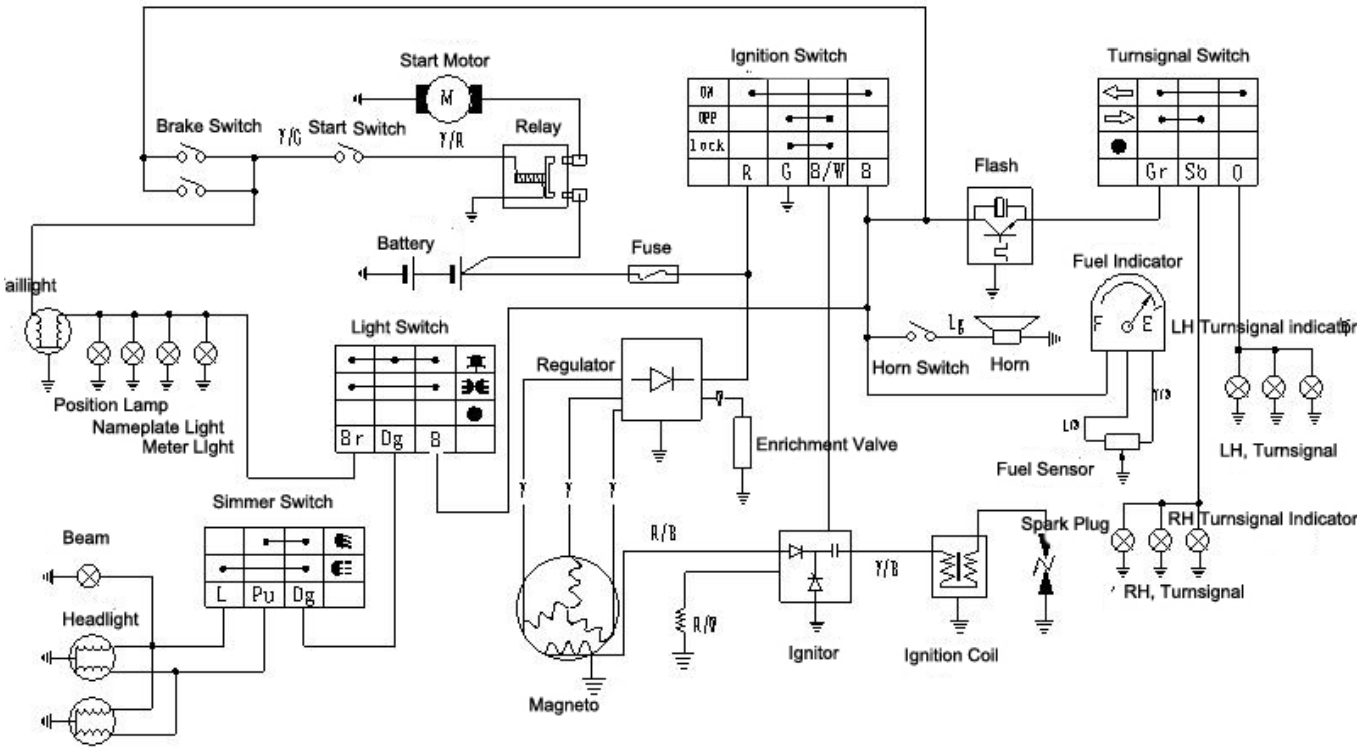

VIII.**Emission Control System Warranty Statement**

Wangye USA Co., LLC is pleased to explain the emission control system warranty on Highway Motorcycle. New Highway Motorcycle must be designed, built and equipped to regulations and standards of the United States Environmental Protection Agency and the California Air Resource Board and free from defects in material and workmanship that may keep it from these requirements in the all applicable regulations.

Wangye USA Co., LLC must warrant the emission control system on the highway motorcycle for 5 years or 6,000 km, whichever comes first, provided that there has been no abuse, neglect or improper maintenance of highway motorcycle.

1. Period of Warranty

The period of warranty shall be one year on delivery, during this period of warranty:

(i). Any part defective by reason of the manufacturer's faulty workmanship or material will be replaced or repaired free of charge;

(ii). Any repairs or adjustments made necessary by reason of the manufacturer's faulty workmanship or material will be performed free of charge.

Emission control system may include parts such as the carburetor or fuel injection system, the ignition system, catalytic converter and engine computer, if it is equipped. Also included may be hoses, belts, connectors and other emission-related assemblies.

2. Responsibilities of Customer

To obtain repairs under warranty, the customer must:

(i). Ensure that the motorcycle is properly operated, maintained and stored as specified in the Owner's Manual;
(ii). Give notice to dealer approved by Wangye USA Co., LLC or other qualified service facility of any and all apparent defects immediately upon discovery, and make the entire motorcycle available at the time for inspection and repair at the dealer's place of business;
(iii). Provide proof of warranty coverage to dealer;
(iv). Authorize the dealer to tear down the motorcycle for diagnostic evaluation should it be required.

All warranty repairs must be done by the dealer and final approval of any repairs rests with Wangye USA Co., LLC. All parts replaced become the property of Wangye USA Co., LLC.

3. Exclusion

This warranty does not cover the repair or damage resulting from abuse or neglect of the motorcycle. Examples of abuse and neglect include, but are not limited to:

(i). Racing and competition;
(ii). Use of lubricants, oils and fuel/oil mixture other than those recommender in the Owner's Manual, improperly installed accessories and use of parts or accessories that are not equivalent in design and quality to genuine Wangye parts;
(iii). Damage as a result of accidents, collisions, contact with foreign materials, impact, submersion or use of the motorcycle after discovery of a defect;
(iv). Appearance-related damages of body parts. Examples of such damages include but are not limited to: scratches, dents, fading, flaking and peeling;
(v). Motorcycle which has been modified in any way from the standard specifications shown in the Owner's Manual, for example, the odometer has been altered;
(vi). Normal wear and tear, corrosion and routine maintenance, such as the recommended service inspections;

(vii). Pre-delivery inspection and assembly;
(viii). Damage from theft, fire, vandalism, explosion, water or acts of God.

4. Restriction

This warranty is in addition to, and not a modification of, any legal warranty required by the laws of any state of US.

Subject to any applicable sales or consumer legislation, the above warranty is in lieu of any warranty or representation, express or implied, including any warranty of performance, merchantability or fitness for a particular purpose on the part of Wangye USA, and any other obligation or liability on behalf of Wangye USA, and the above warranty constitutes your sole remedy and the full liability of Wangye USA. In no event shall Wangye USA be liable for special, incidental or consequential damages howsoever caused, whether by negligence or otherwise resulting directly or indirectly from the use of the Motorcycle, or the Motorcycle's having replacement parts or the unavailability of replacement parts. Wangye USA does not assume or authorize any person to create or assume for Wangye USA any obligation or liability in connection with the Motorcycle or any part thereof distributed by Wwangye USA.

5. Contact

For any questions regarding emission control system warranty, please contact as following:
Company Name: Wangye USA Co., LLC
Address: 1170 Corporate Dr. West Ste. 204, Arlington, TX 76006
Tel: 817-640-1108 ext 219
Fax: 817-649-5006